



HP Photosmart Premium e-All-in-One C310a Duplexer Replacement

 
This guide will aid you in the removal of the duplexer.

Written By: Andrew Schaub



INTRODUCTION

This guide helps you remove the duplexer. This is a common area where paper jams occur.



- Pull the duplexer away from the printer.

Step 3



- The duplexer is now removed from the printer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-04 03:34:52 PM.